

 


DIGITECH
Audio

User Manual

Rechargeable 8" PA Speaker with UHF Microphone

CS-2510

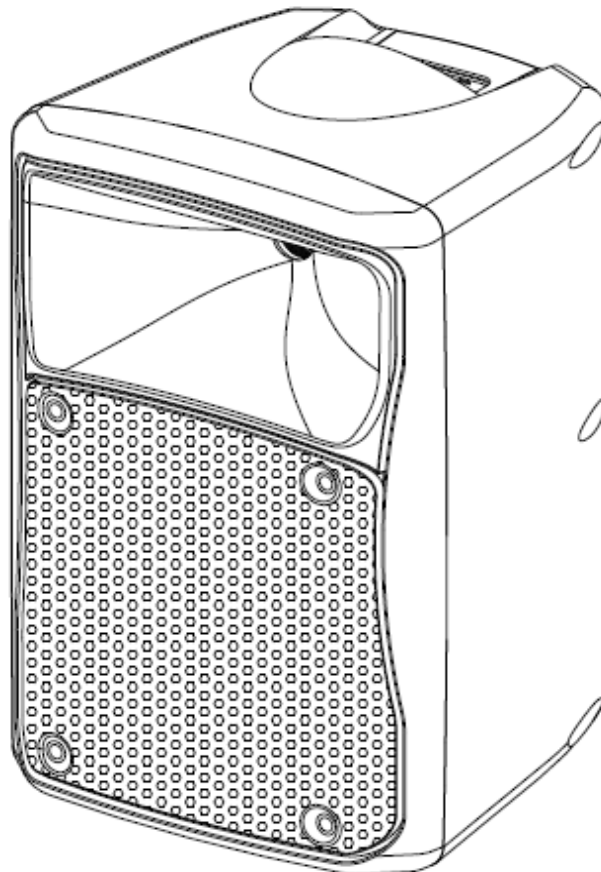


Technical Specifications:

Max. Output power:	40WRMS
Frequency Response:	62Hz - 18kHz
UHF Frequency:	520Mhz - 568Mhz
Speaker Drivers:	- LF: 8" (200mm) Cone - HF: 1" (25.4mm) Compression Driver
Audio Inputs:	- XLR + 6.3mm hybrid socket for microphone - 6.3mm for instrument - RCA for Line input (e.g. CD Player, etc.) - 3.5mm AUX Stereo Input
Audio output:	6.3mm phone socket for loop out
Recharge time:	8 hours
Usage Time:	4-5 hours
Dimensions:	320(W) x 310(D) x 455(H) mm
Weight:	8kg

Box Contents:

- 1 x PA Speaker
- 1 x UHF Microphone
- 1 x UHF Transmitter
- 1 x Power Cable

 MP3 Player:

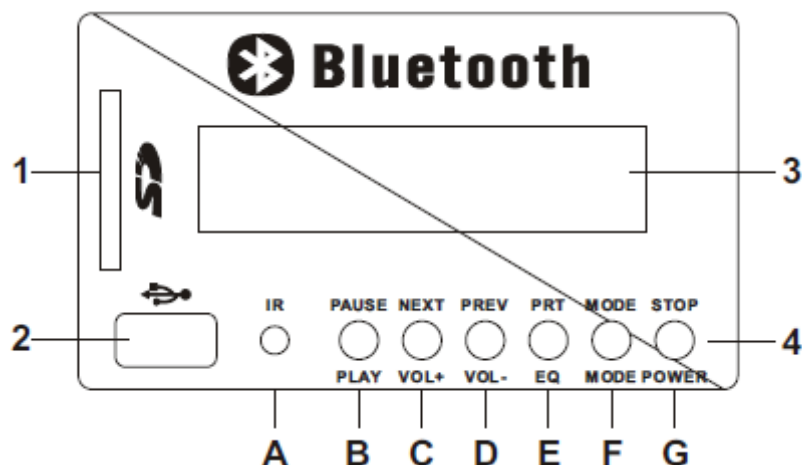

1. SD Input

This slot is used to insert a SD memory card (max capacity 32GB) with MP3 files to be read.

2. USB Input

In this port, plug in any USB memory stick with MP3 files to be read.

3. LCD

This LCD displays all relevant information about the function being selected or the MP3 file being played.

4. Function Selector

This section provides front-selectable push switches, allowing you to choose between one.

A. IR receiver from Remote Control

B. Play/Pause

- Press this button once to play the chosen song. Press it again to pause the song momentarily.
- Press and hold the button to pause the song.

C. Next/Volume Up

- Press this button once to go to the next song.
- Press and hold this button to increase the volume.

D. Previous/Volume Down

- Press this button once to go back to the previous song.
- Press and hold this button to lower the volume.

E. Repeat/EQ

- Press this button once to play the current song on repeat.
- Press and hold this button to select among different types of equalization applied to the song currently playing.

 
F. USB/SD/Bluetooth Mode Change

- Press this button once to select USB, SD or Bluetooth mode.

G. Stop/Power

- Press this button once to stop the MP3 player.
- Press and hold this button to turn the MP3 player On or Off.

Remote Control:

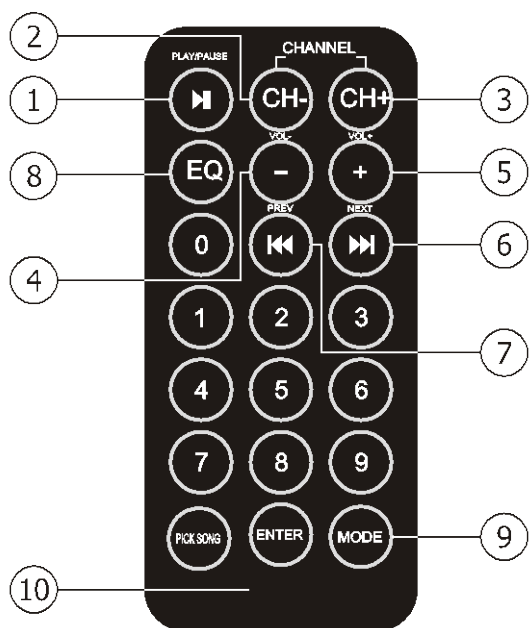

This remote will operate at a distance of up to 3m and can only control the speaker when pointed to the rear of the unit, i.e. at the IR receiver. The remote control included with your product may vary from the one pictured here.

1. Play/Pause
2. FM Channel –
3. FM Channel +
4. Volume Down
5. Volume Up
6. Forward
7. Back
8. EQ Select
9. USB/SD/Bluetooth Mode Change
10. Battery Indicator

Bluetooth Pairing:

1. Turn on the MP3 player by pressing and holding the 'Stop/Power' button.
2. Use the 'Mode' button on the MP3 player or the remote control to select Bluetooth mode. The LCD will show "Bluetooth Initializing".
3. From your Bluetooth technology enabled device, e.g. phone or tablet, turn your Bluetooth technology on, and search for nearby devices. Locate the Bluetooth name "Bluetooth" and connect. The LCD will now show "Bluetooth Connected".

Controls and Features:



- | | | |
|---------------------------|---------------------------------|------------------------|
| 1. Tweeter | 9. Microphone Input | 15. Loop Out |
| 2. Steel Grill and Woofer | 10. Input Volume Controls | 16. MP3 Volume Control |
| 3. Wireless Antenna | 11. Battery Indicators | 17. Echo Control |
| 4. Handle | 12. DC Power Input | 18. Bass Control |
| 5. Battery Cover | 13. Wireless MIC Volume Control | 19. Treble Control |
| 6. MP3 Player | 14. AUX Stereo Input | 20. Power Switch |
| 7. RCA Line Input | | 21. Main Power Input |
| 8. Instrument Input | | 22. Fuse Holder |

IMPORTANT

- Never attempt to open, repair or modify any part of the PA Speaker.
- Never get any part of the PA Speaker wet, including the power supply.
- Ensure to keep the PA Speaker “Off” when not in use.

Distributed by:

TechBrands by Electus Distribution Pty. Ltd.
320 Victoria Rd, Rydalmere
NSW 2116 Australia
Ph: 1300 738 555
Int'l: +61 2 8832 3200
Fax: 1300 738 500
www.techbrands.com