 


DIGITECH *Audio*

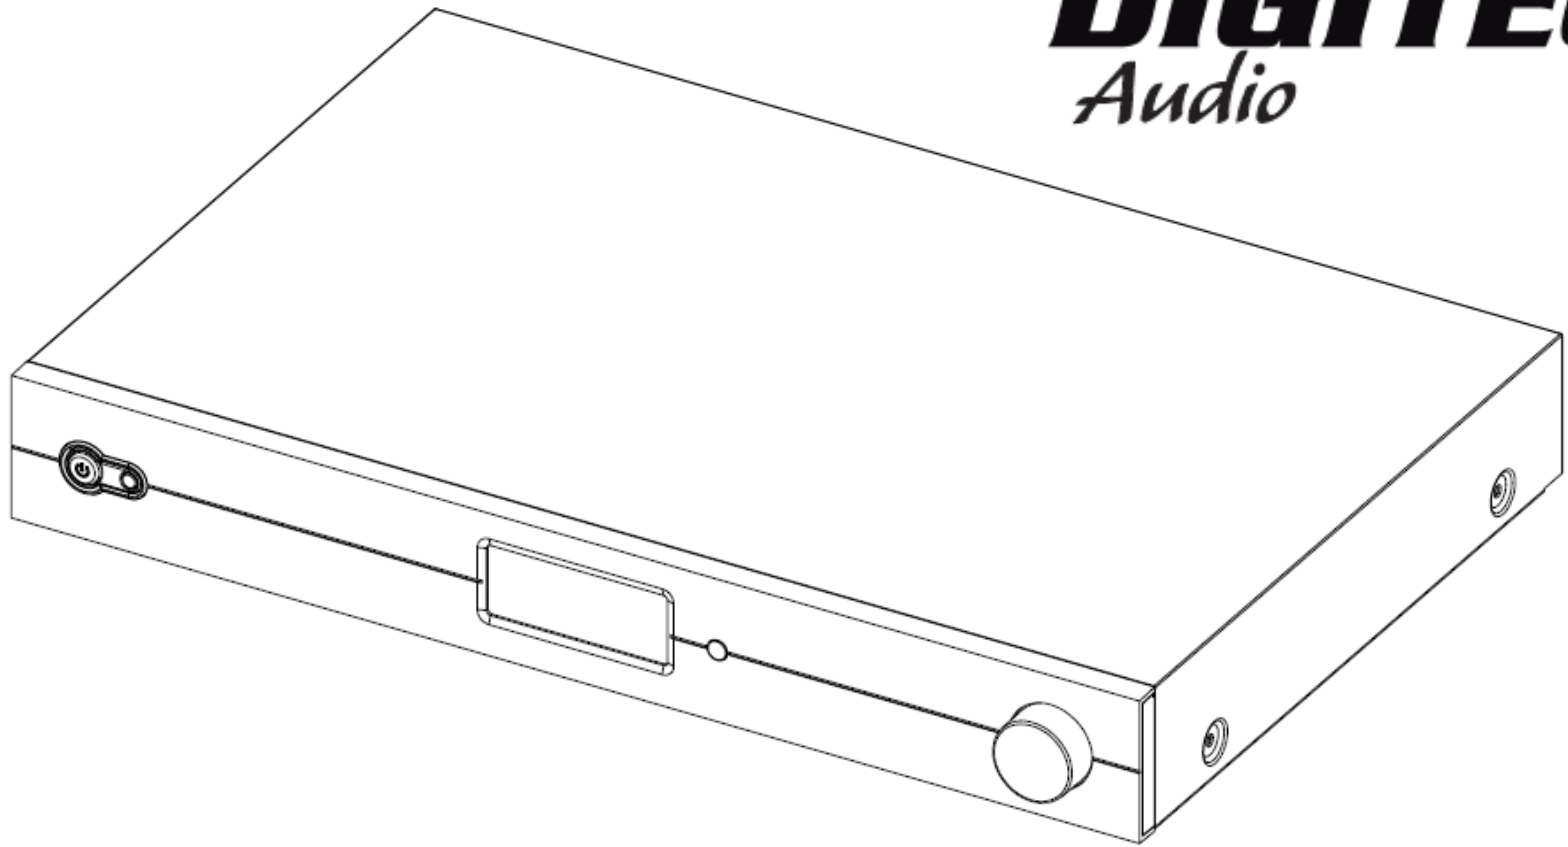

Safety Precautions

To achieve the utmost in enjoyment and performance, and in order to become familiar with its features, please read this manual carefully before attempting to operate the unit, this will assure you years of faithful, trouble free performance and listening pleasure.

Important Notes

- This safety and operating instruction should be retained for future reference.
- The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on apparatus.
- Avoid installing the unit in locations described below:
 - Places exposed to direct sunlight or close to heat radiating appliances such as electric heaters.
 - On top of other stereo equipment that radiate too much heat.
 - Places blocking ventilation or dusty places.
 - Places subject to constant vibration.
 - Humid or moist places.
- No naked flame sources such as lighted candles should be placed on or near the unit.
- The use of apparatus in moderate climates.
- Operate turning controls and switches as instructed in the manual.
- Before turning on the power for the first time, make sure the power cord is properly installed.

For safety reasons, do not remove any covers or attempt to gain access to the inside of the product. Refer any servicing to qualified personnel. Do not attempt to remove any screws, or open the casing of the unit; there are no user serviceable parts inside, refer all servicing to qualified service personnel.



CAUTION
RISK OF ELECTRIC
SHOCK



CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT REMOVE COVER (OR BACK), NO USER SERVICEABLE PARTS INSIDE, REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



DANGEROUS VOLTAGE

Dangerous Voltages, that may be of sufficient magnitude to constitute a risk of electric shock to persons is present within this product's enclosure.



ATTENTION

The owner's manual contains important operating and maintenance instructions, for your safety, it is necessary to refer to the manual.

WARNING: TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO DRIPPING OR SPLASHING.

NOTE: This unit will become warm when used for a long period of time. This is normal and does not indicate a problem with the unit.

Safety Information

Please note: Because it is a developing technology, station availability can change without notice. As new multiplexes and transmitters are turned on, new stations will begin transmitting and new postcodes will be able to receive DAB digital radio. Conversely, some DAB radio stations may disappear without notice.

Covers - Do not remove any fixed covers as this may expose dangerous voltages.

Weather - It is advisable to unplug an external aerial during a thunderstorm.

Ventilation - The ventilation holes on the casing prevent your product from overheating. Do not block or cover these holes, especially with cloth or paper. It is recommended you leave a 10cm gap all around the unit.

Damage - Never use the product if it is damaged in any way. Always place the unit on a flat level surface avoiding anywhere which may be subject to strong vibration.

Batteries - Dispose of used batteries in an environmentally friendly manner.

Temperature - Avoid extremes of temperature, either hot or cold, place your product well away from heat sources such as radiators or gas/electric fires.

Temperature - Avoid extremes of temperature, either hot or cold, place your product well away from heat sources such as radiators or gas/electric fires.


Moisture - Do not allow your product to be exposed to rain, moisture or dust. If any liquid is spilt into this product it can cause serious damage. If you spill any liquid switch the unit off at the mains immediately. Contact your store immediately.

Caution: The power adaptor will still be supplying power to the unit when connected, even if the unit appears to be off. The power adaptor must be removed from the mains socket to power off completely.

Table of Contents

<i>Safety Precautions</i>	2	<i>Set Time</i>	12
<i>Safety Information</i>	3	<i>Set Language</i>	12
<i>Package Content</i>	5	<i>Set Backlight</i>	12
<i>Front Overview</i>	6	<i>Factory Reset</i>	13
<i>Back Overview</i>	7	<i>Get SW Version</i>	13
<i>Remote Control Overview</i>	8	<i>Set Sleep</i>	13
<i>General Information</i>	9	<i>Set Dimmer</i>	13
<i>DAB+/DAB MODE</i>	10	<i>Specification</i>	13
Power On	10		
Full Scan	10		
Accessing another Program.....	10		
Update Station List.....	10		
Perform Prune.....	10		
View Station Information.....	10		
<i>FM MODE</i>	11		
Switching to FM Mode	11		
Manually Scan.....	11		
Auto Scan	11		
View Station Information.....	11		
Audio Setting	11		
Setting Station Presets (ALL MODE)	11		
Selecting a Preset Station (ALL MODE).....	11		
<i>General Operation</i>	12		

 
Package Content

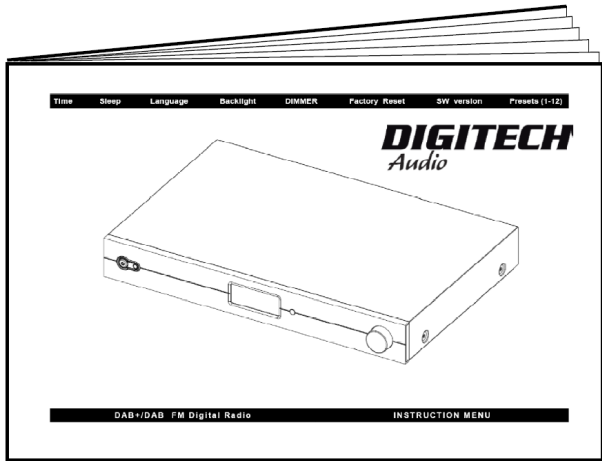


Instruction manual



 
coaxial digital cable

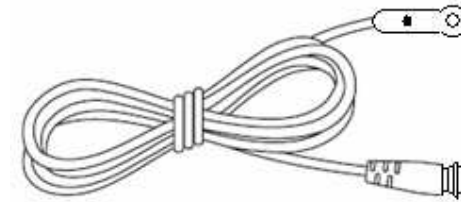

Antenna

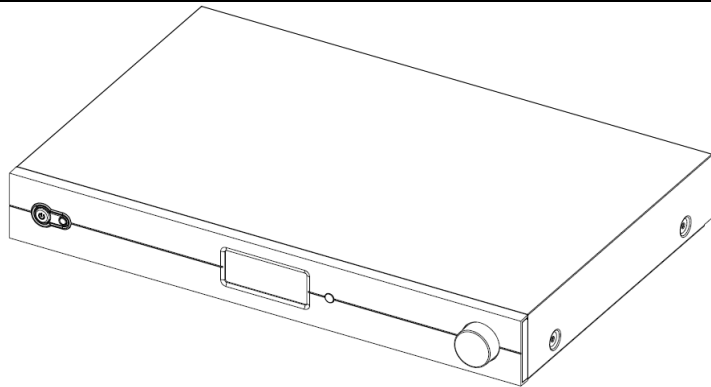 


Main unit

 


Remote control and its batteries(size: IECR03. UM-4 AAA 1.5V)

 Front Overview

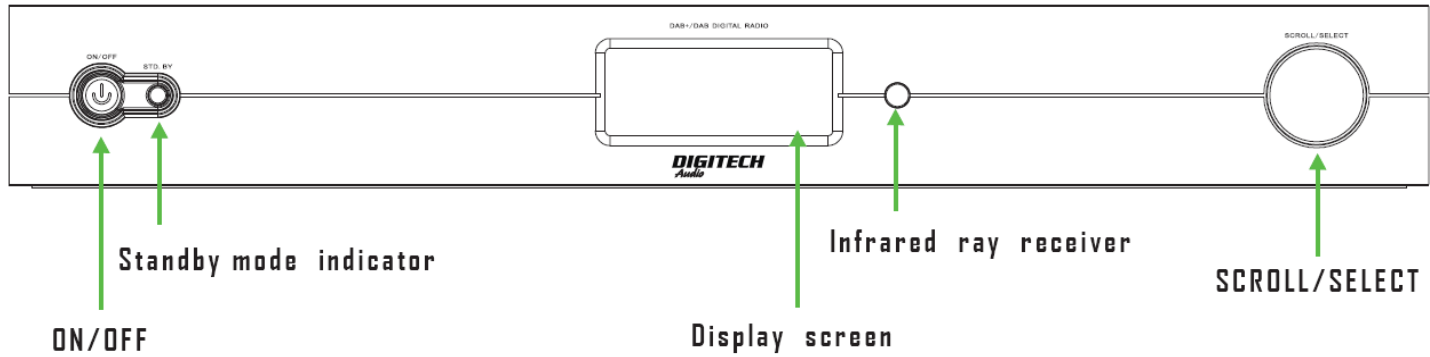


Control	All mode
<p>⏻</p>	<p>It calls ON/OFF button, press to turn on/off Radio</p>
<p>Standby mode indicator</p>	<p>While press ⏻, radio goes into standby mode, the indicator will indicate red, Press ⏻ again, radio goes into play mode, the indicator will be off.</p>
<p>SCROLL/SELECT</p>	<p>All mode: turn this knob to browse options, press SELECT to confirm</p> <p>FM mode: while FM frequency shows up, this knob allows you seek available stations. Two ways:</p> <ol style="list-style-type: none"> Turn to adjust FM frequency 0.05 MHz per step, or Press to conduct auto-scan.

 Back Overview

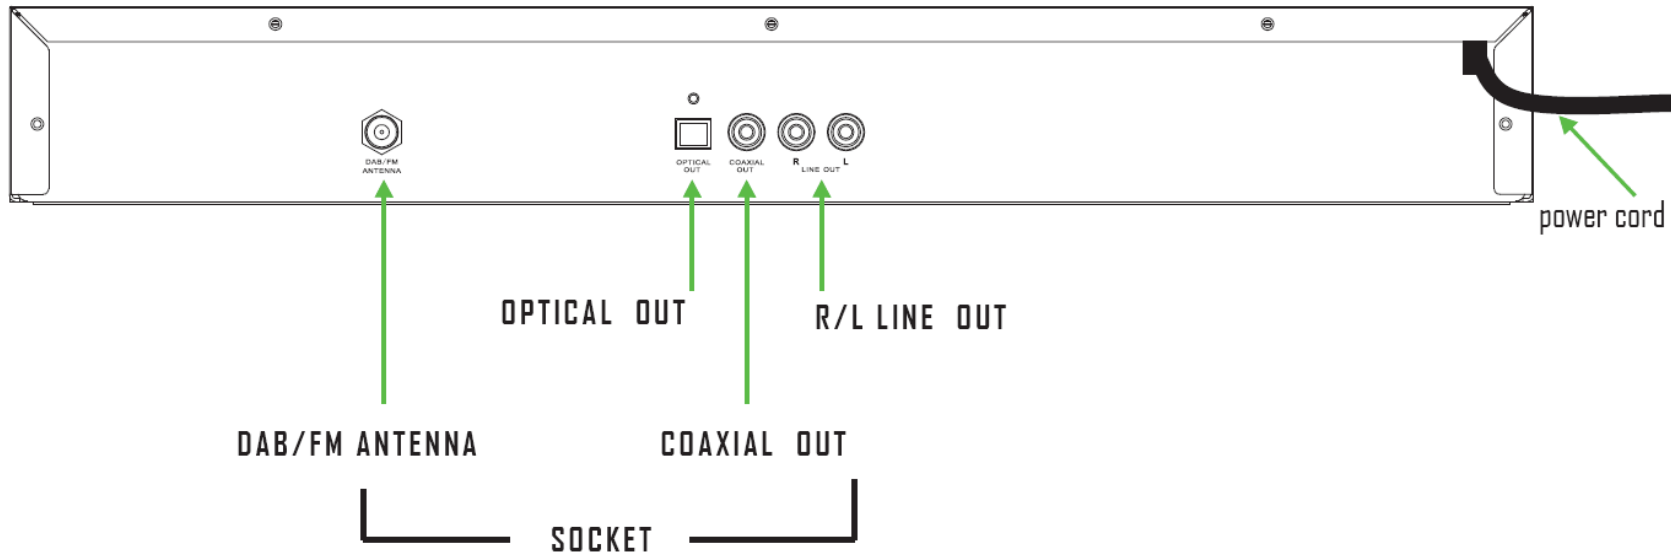

DAB/FM Antenna:	It is designed for enhance both DAB and FM receive scope.
Optical out socket:	Connecting to a fiber-optic/ coaxial digital cable will allow your radio transmitting digital signal to audio equipments.
Coaxial out socket:	
Line out socket:	<ol style="list-style-type: none"> Red/Black RCA Line out sockets located on the rear of your radio is provided for connecting the audio signal to an external amplifier. Inserting a line out audio cable will not mute the internal loudspeaker. Set the proper volume level if desired.

 Remote Control Overview

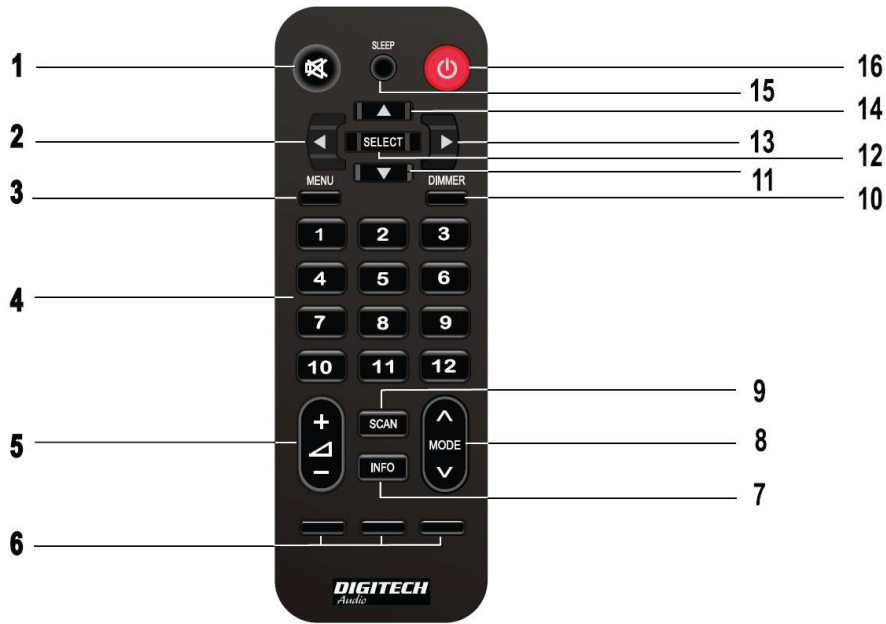

No.	Control	All mode
1	MUTE	Press to have your radio mute, press again to have sound
2		All mode: Press to backward view options FM mode: while frequency is showing up, press to manually downward browse frequency 0.05MHz per step or press and hold to autoscans.
3	MENU	Press to enter menu setting system
4	P1-P12	Press and hold one of P1-P12 to store preset Press one of P1-P12 to access the corresponding preset program
5	+ -	Press to adjust volume level
6	IDLE	No function
7	INFO	Press to activate info function
8	MODE	Press to convert between DAB+ and FM mode
9	SCAN	Press and hold to activate scan function
10	DIMMER	Press repeatedly to adjust dimmer level
11		Press to downward browse options
12	SELECT	All mode: Press for confirmation. FM mode: while frequency is showing up, press to autoscans.
13		All mode: Press to forward view options FM mode: while frequency is showing up, press to manually upward frequency 0.05MHz per step or press and hold to autoscans.
14		Press to upward browse options
15	SLEEP	Press to enter sleep settings
16		Press to turn on/off Radio

General Information

Carefully remove your **radio and its accessories** from the box. You may wish to store the packaging for future use.


Positioning Your Radio

- ✓ Place it on a flat / stable surface where no subject to vibration.
- ✓ Avoid the following locations:
 - *Where it is exposed to direct sunlight.*
 - *Where it is close to heat radiating sources.*
 - *Where the humidity is high and ventilation is poor.*
 - *Where it is dusty.*
 - *Where it is damp or there is a possibility of water dripping or splashing onto unit.*

Install and Adjusting the Antenna


- ✓ Screw your antenna to DAB/FM antenna socket on radio backside.
- ✓ The antenna should be extended to ensure good reception in both DAB+/DAB and FM mode.
- ✓ It may be necessary to alter the position of Radio and/or antenna to achieve the best signal.

Tuning On/Off

- ✓ Firstly, insert the power adaptor into the wall outlet.
- ✓ Secondly, press  to turn on the unit or press it again to turn off the power.


DAB+/DAB MODE

Power On

1. Connect one end of fiber-optic/coaxial digital cable to the optical out (or coaxial out) socket on the rear of your radio, the other end connect to your audio source device.
2. Extend the cable antenna found on the rear of radio.
3. Insert the power adaptor into the wall outlet, press  to switch it on, it will say 'Welcome to Digital Radio'.



Full Scan

1. For initial use, it will take the auto run into DAB mode, after welcome greeting, it will conduct a full scan which may take 1-2 minutes for completion.
2. As soon as full scan is accomplished, it will store all those currently activated DAB+/DAB stations.
3. Now, it will automatically load to first station in its storage.



-  **Note:** 1. the DAB+/DAB stations will be displayed in alphanumeric order.
2. If no DAB+/DAB signal is found in your area, it may be necessary for you to relocate your radio.

Accessing another Program






It is pretty easy to handle:

1. Turn the **SCROLL/SELECT** knob or press  or  (on remote control) to browse the station list.
2. While your favor program shows up, press **SELECT** to confirm, radio will try to load immediately.

Update Station List

-  **Note:** Station availability can be changed without notice, for keeping your station list up to date, you need carry out this order. Remember place your radio at a stronger signal position!
- ✓ Make sure your radio doesn't engage in system setting at the moment, press and hold **SCAN**, the unit will scan all the DAB+/DAB channels and add any new stations available to the station list, or
 - ✓ Press **MENU** on remote control, it will say 'Time', and then press  to 'Full scan', press **SELECT** to conduct this order

Perform Prune

-  **Note:** if you want only active stations (currently broadcasting) available, please follow this order.
1. Press **MENU**, and then press  or  to 'Prune'.
 2. Press **SELECT** to confirm, it will ask you 'Prune? <No> Yes'.
 3. Press  or  to 'Yes', press **SELECT** to confirm.


View Station Information

- ✓ While playing a program, this order can be reached by repeatedly pressing **INFO** on remote control.
- ✓ Doing so, you will obtain info such as 'Dynamic Label Segment', 'Signal Strength', 'Program Type', 'Multiplex Name', 'Station transmission frequency' (such as 11B 218.64MHz), 'Signal error' (the lower the better, its range among 0-100), 'Signal Information' (such as 192kbps stereo), 'Time', and 'Date'.

FM MODE

Switching to FM Mode

1. While enjoying a DAB program, press **MODE** to FM Mode.

 **Note:** For initial use, it will start at the beginning of the FM frequency range (87.50MHz). Otherwise, the last FM station you were listening to should be selected.


Manually Scan

- ✓ While frequency is showing up, press ◀ or ▶ or turn the **SCROLL/SELECT** knob to adjust FM frequency 0.05MHz per step.

Auto Scan

While frequency is showing up, three ways to do auto scan:

- ✓ Press **SELECT** to conduct 'Auto Scan', or
- ✓ Press and hold ◀ or ▶ to perform this order.
- ✓ Alternatively, press and hold **SCAN** to auto scan.

 **Note:** a. the display will show the frequency changing until it stops on the next station.
b. after it reached one end of the frequency range, it will restart auto-scanning.

View Station Information

- ✓ While playing a program, this order can be reached by repeatedly pressing **INFO** on the top of radio.
- ✓ Doing so, you will obtain info such like 'RadioText', 'Program Type', 'Multiplex Name', 'Audio Type' (Stereo/Mono), 'Time' and 'Date'.

Audio Setting

1. Press **MENU**, it will say 'Audio setting'.
2. Press **SELECT** to confirm, you will find two options (the default option is 'Stereo allowed').
3. Press ▲ or ▼ to browse, you will find 'Stereo allowed' and 'Forced mono', press **SELECT** to confirm your expected one, it is done.

Setting Station Presets (ALL MODE)

Your radio can store 12 DAB and 12 FM station presets.

To store the current station:

- ✓ Press and hold one of **PRESET buttons1-12** until it says 'Preset # store', the corresponding preset number should be stored.

Selecting a Preset Station (ALL MODE)


To select a stored station:

- ✓ Press **MODE** to convert into relative mode, and then press one of **PRESET buttons1-12** to recall.

General Operation

Set Time

1. In DAB mode, press **MENU**, it will say 'Time',

 **Note:** In FM mode, press **MENU**, it will say 'Audio setting', we need press **▲** to 'Time'.

2. Press **SELECT** to enter time setting, it says 'Set 12/24 hour'.

A. Set hour format 12/24H

- a. Continue above step2, press **SELECT** to confirm to set hour format.
- b. Press **▲** or **▼** to browse options, in which 'Set 24 hour' and 'Set 12 hour' available.
- c. Press **SELECT** to confirm your favorite option, and it is done!

B. Set time ----- manual setting

- a. Continue above step2 (or redo above step1-2), press **▲** to 'Set time', press **SELECT** to confirm.
- b. Press **▲** or **▼** to adjust the hour, press **SELECT** to confirm the hour, and then it will ask you to set the minutes.
- c. Press **▲** or **▼** to adjust the minutes, press **SELECT** to confirm, and it is done.

C. Set date ----- manual setting

1. Setting it by referring to set time, they're exactly the same.

D. Auto update----- auto update

1. Continue above step2 (or redo above step1-2), press **▲** to 'Auto update', press **SELECT** to confirm.
2. Press **▲** or **▼** to 'Update from DAB', press **SELECT** to confirm.

E. Set date format


- a. Continue above step2 (or redo above step1-2), press **▼** to 'Set date format', press **SELECT** to confirm.
- b. Press **▲** or **▼** to browse options: 'DD-MM-YYYY' and 'MM-DD-YYYY'.
- c. While your expecting option is showing up, press **SELECT** to confirm.

Set Language

1. Press **MENU**, and then press **▲** or **▼** to 'Language'.
2. Press **SELECT** to confirm, and then press **▲** or **▼** to cycle through, you will find 'English', 'Frangais', 'Deutsch' and 'Italiano' available.
3. While your selecting one is showing up, press **SELECT** to confirm, it is done!


Set Backlight

1. Press **MENU**, and then press **▲** or **▼** to 'Backlight'.
2. Press **SELECT** to confirm, it will say: 'Timeout'.

 **Note:** 'Timeout' means that how long it will be from bright backlight run into dark backlight.

3. While cursor point to 'Timeout', press **SELECT** to confirm.
4. Press **▲** or **▼** to cycle through, in which you will find On/10/20/30/45/60/90/120/180 sec available.
5. Press **SELECT** to confirm your favorite option, it is done!

Factory Reset


 **Note:** you might want your radio come back to its original setting condition, doing this order, it can be easily achieved.

1. Press **MENU**, and then press **▲** or **▼** to '**Factory Reset**'.
2. Press **SELECT** to confirm, and it will say '**Factory Reset? ----- < No > Yes**'.
3. Press **◀** or **▶** to '**Yes**', and then press **SELECT** to confirm. Your radio will restarting.

Get SW Version

1. Press **MENU**, and then press **▼** to '**SW version**'.
2. Press **SELECT** to confirm, then you get it!

Set Sleep

 **Note:** you may want your radio automatically turn off after a certain period of time (let's say 15/30/45/60/90minutes), you can do it through this operation.

1. Press **SLEEP**, it will say: '**Set sleep time ----- Sleep off**', press **▲** or **▼** (you also can press **◀** or **▶**) to browse the sleep timer off/15/30/45/60/90 minutes.
2. When your required option is displayed, press **SELECT** to confirm, sleep timer icon will jump on immediately.
3. To check how long the sleep timer will be reached, just press **SLEEP**, and it will say '**Set sleep time ----- XX minutes**'.
4. Radio will turn off after the setting time has elapsed.
5. To continue enjoying your program, press **⏻** to power it on.

Set Dimmer

- ✓ Make sure your radio is powering on, press **DIMMER** repeatedly to set it, it has three levels.
- ✓ It is designed for your eyes comfortable.

Specification

ITEMS	DESCRIPTION
Specifications:	DAB+/DAB, FM digital radio
Digital Output:	Optical and coaxial
Audio Output:	Stereo output
Frequency Ranges:	FM: 87.5-108MHz DAB+/DAB: 174 – 240MHz
LCD Display:	High resolution display
Power Supply:	240Vac, 50-60Hz
Dimension:	430(W)mm x 68(H)mm x 303(D)mm
Net Weight:	3Kg



This symbol on the product or in the instructions means that your electrical and electronic equipment should be disposed at the end of its life separately from your household waste. There are separate collection systems for recycling in the EU.

For more information, please contact the local authority or your retailer where you purchased the product.