

Error Codes

MB3623

Battery is in reverse polarity	Er1	Check charge clamp, connect the red clamp to positive (+) battery post, and black clamp to negative (-) post
Battery problem	Er2	Battery has problem. Replace with a new battery and try again.
Overcurrent protection	Er3	PCBA damaged, Replace if under warranty else dispose.
Over Temperature protection	Er4	Check working temperature environment, with work from 0-40°C
Battery voltage < 3V	[3.0	Low voltage. Replace with a new battery and try again
Battery voltage > 28V]28	Check the battery voltage is for 12V system.