# HDMI EXTENDER OVER ONE CAT5E/CAT6 (TCP/IP)

User manual

Thank you for purchasing this product. For optimum performance and safety, please read these instructions carefully before connecting, operating or adjusting this product. Please keep this manual for future reference.

#### **■** Introduction

The HDMI Extender over ONE CAT 5E/6 is a tool for extending your HDMI signal over long distances to a compatible display. Instead of using expensive HDMI cables, your existing CAT 5E/6 cables/sockets can be utilized to perform advanced functions like transferring Deep Color (12 bits/color) video and digital audio, with a bandwidth up to 225MHz. The HDMI Transmitter and Receiver, over ONE CAT 5E/6 extender is your substantial HDMI extender tool. The HDMI Extender also support IR re-transmitting, so you can control the Source which is 100 meters outside using the HDMI Extender.

#### ■ Features

- 1. DC 5V~12V wide power supply.
- 2. HDMI 1.3, HDCP 1.1 and DVI1.1 compliant.

3.	Support Deep Color up to 12 bits/color.
4.	Support IR re-transmitting.
5.	Uses one CAT5E/6 cable for data/DDC transmission.
6.	Equalizes and recovers incoming TMDS data before re-transmitting it in optimal quality regardless
	of the incoming signal quality.

- 7. Cable testing showed that with 1080p resolution the HDMI input source can be 20meters away.
- 8. When transmitting a signal in 1080p resolution the CAT6 operating distance is 100 meters.

### ■ Package

1.	HDMI Extender Transmitter	1PCS	
2.	HDMI Extender Receiver	1PCS	
3.	IR Transmitter	IPCS	
4.	IR Receiver	1PCS	
5.	5V DC Power Supply adaptor	2PCS	

6. Operation Manual ------1PCS

#### ■ Specifications

Frequency Bandwidth 2.25Gbps (single link)

HDMI Transmitter Input/ Output Ports 1x HDMI Female port/1 x CAT6

HDMI Receiver Input/ Output Ports 1 x HDMI Female port/1 x CAT6

Power Supply DC 5V~12V

ESD Protection Human Body Model: ± 8kV (air-gap discharge)

± 4kV (contact discharge)

Dimensions (mm) 65(W) X 100 (D) X 25 (H)

Operating Temperature  $0^{\circ}\text{C} \sim 40^{\circ}\text{C} / 32^{\circ}\text{F} \sim 104^{\circ}\text{F}$ 

Storage Temperature  $-20^{\circ}\text{C} \sim 60^{\circ}\text{C} \, / \, -4^{\circ}\text{F} \sim 140^{\circ}\text{F}$ 


Relative Humidity 20~90% RH (non-condensing)

#### **■** Operation controls and Functions

#### 1. HDMI Extender Transmitter

#### Front Panel

#### Rear Panel

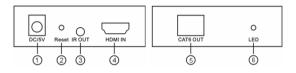

- 1. Power: Plug the 5V~12VDC power supply into the unit and connect the adaptor to AC wall outlet.
- RESET: Factory reset button. When the Receiver system functions have been changed, Pressing this button for 10seconds can realize factory reset.
- IR OUT: Remote control signal transmit, connect the IR transmit cable with HDMI Extender
   Transmitter. The IR transmit cable face to the IR receiver of the Source.
- 4. HDMI: HDMI Input port.
- 5. CAT6 OUT: Connect the CAT 5E/6 output of the Transmitter with the CAT 5E/6 input of the HDMI


over single CAT6 receiver.

6. LED indicator: When the DC power on, the indicator will be light.

#### 2. HDMI Extender Receiver

# Front Panel

Rear Panel

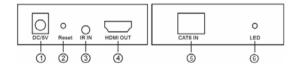


- 1. Power: Plug the 5V~12VDC power supply into the unit and connect the adaptor to AC wall outlet.
- RESET: Factory reset button. When the Receiver system functions have been changed, Pressing this Button for 10seconds can realize factory reset.
- 3. IR IN: Remote control signal Receive, connect the IR receive cable with HDMI Extender Receiver.
- 4. HDMI Out: HDMI output port.

5

- CAT6 IN: Connect the CAT6 in of the receiver with the CAT6 input of the HDMI over single CAT6 transmitter.
- 6. LED indicator: When the DC power on, the indicator will be light.

#### ■ Application Example

1. Transmitter and Receiver one by one application.

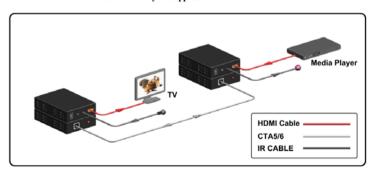

## 2. Transmitter and Receiver one by N application, N can up to 253.

